

SR-MV50US

<b>Key Name</b>	<b>key Function</b>	<b>Format</b>	<b>Custom Code</b>	<b>Data Code</b>
VHS TIMER		JVC	43/53/6 F /7F	3 F
DVD TIMER		JVC	43/53/6 F /7F	35
VHS/DVD		JVC	43/53/6 F /7F	D6
POWER ON/OFF		JVC	43/53/6 F /7F	0B
1		JVC	43/53/6 F /7F	21
2/ABC		JVC	43/53/6 F /7F	22
3/DEF		JVC	43/53/6 F /7F	23
4/GHI		JVC	43/53/6 F /7F	24
5/JKL		JVC	43/53/6 F /7F	25
6/MNO		JVC	43/53/6 F /7F	26
7/PQRS		JVC	43/53/6 F /7F	27
8/TUV		JVC	43/53/6 F /7F	28
9/WXYZ		JVC	43/53/6 F /7F	29
X/CANCEL		JVC	43/53/6 F /7F	36
0/AUX		JVC	43/53/6 F /7F	33
MEMO/MARK		JVC	43/53/6 F /7F	90
G-CODE		JVC	43/53/6 F /7F	C1
PROGRAM/CHECK		JVC	43/53/6 F /7F	3D
DISPLAY		JVC	43/53/6 F /7F	38
PLAY SET UP/RPOGRE		JVC	43/53/6 F /7F	8E
TOP MENU/NAVI		JVC	43/53/6 F /7F	E0
Δ		JVC	43/53/6 F /7F	82
MENU		JVC	43/53/6 F /7F	81
<		JVC	43/53/6 F /7F	84
ENTER (OK)		JVC	43/53/6 F /7F	3C
>		JVC	43/53/6 F /7F	80
SET UP		JVC	43/53/6 F /7F	37
▽		JVC	43/53/6 F /7F	86
RETURN		JVC	43/53/6 F /7F	D4
PREVIOUS		JVC	43/53/6 F /7F	15
NEXT		JVC	43/53/6 F /7F	14

REW/SLOW(-)	JVC	43/53/6F /7F	07
PLAY/SELECT	JVC	43/53/6F /7F	0C
FF/SLOW(+)	JVC	43/53/6F /7F	06
STOP/CLEAR	JVC	43/53/6F /7F	03
PAUSE	JVC	43/53/6F /7F	0D
REMAIN/REC MODE	JVC	43/53/6F /7F	31
← (7S BACK)	JVC	43/53/6F /7F	DC
→(30S SKIP)	JVC	43/53/6F /7F	96
ANGLE	JVC	43/53/6F /7F	C0
SUBTITLE	JVC	43/53/6F /7F	C4
DVD CH+	JVC	43/53/6F /7F	19
TV/DVD	JVC	43/53/6F /7F	13
AUDIO SEL/[TVMUTE]	JVC	43/53/6F /7F	17
DVD CH-/[TV CH-]	JVC	43/53/6F /7F	18
VHS/DVD	JVC	43/53/6F /7F	D6
RECORD	JVC	43/53/6F /7F	CC
RECORDPAUSE	JVC	43/53/6F /7F	CD